



## PROCESS

- Disconnect power of the controller.
- Take out the back cover of the keyboard.
- Remove the old memories (marked in the drawing with the vowel E and O) doing lever in the borders by means of a thin screwdriver.
- Take out the new memories from the container, take it carefully and put it in the correspondent baseboard. **Be aware about the reference slot, according to the drawing.** *The memory marked with the vowel E goes to the E base, and the O to the O base.*
- Pay attention in have well connected all the memory sticks in the base.
- Keep the old memories in the container where the new ones have been sent.
- Place again the back cover of the keyboard.
- Turn on the electricity of Agronic.
- If the unit is beeping continuously, it means that some of the memory sticks have not been introduced correctly into the base.