

Replacing the front of the Agrònic 4000 to Agrònic 4500 for box model

SUPPLIED MATERIAL



Front Agrònic 4500 box model:

- Agrònic 4500 micro plate
- Agrònic 4500 keyboard
- Integrated GPRS/4G or WiFi modem
- Integrated eSIM card
- Antenna


BOX FORMAT ASSEMBLY

- 1 Disconnect power from the Agrònic 4000.


- 2 Remove the four screws.




- 3 Lift the keyboard.

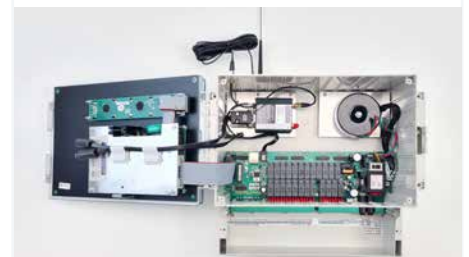


- 4 Check whether the unit has any telephone type cables connected to the keyboard. If it does, disconnect them from the plate because they are unusable.

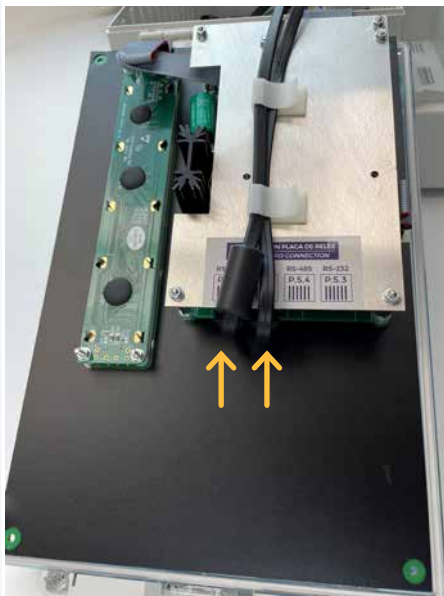


- 5 If the Agrònic 4000 unit has a GPRS modem option, remove the modem, the antenna and also the power cable that is connected to the relay or analog I/O board. (The Agrònic 4500 is supplied fitted with its modem and integrated eSIM card).

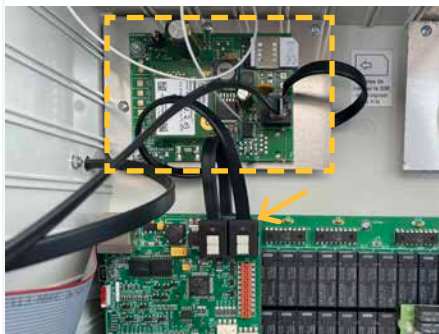

- 6 If the Agrònic 4500 unit has an analog I/O option, remove the option by removing the three screws, so that the front can be changed.

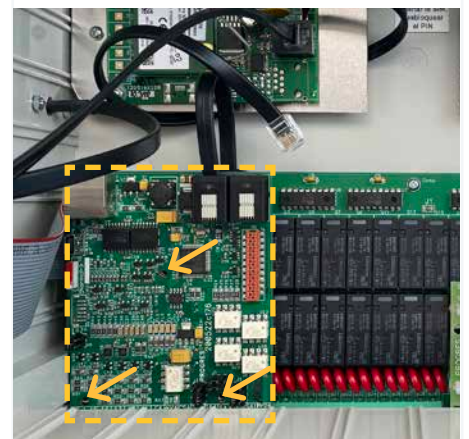


7 Separate the keyboard part of the box by carefully pulling the flat gray tape that joins the two plates, then replace it with the new Agrónic 4500 front.

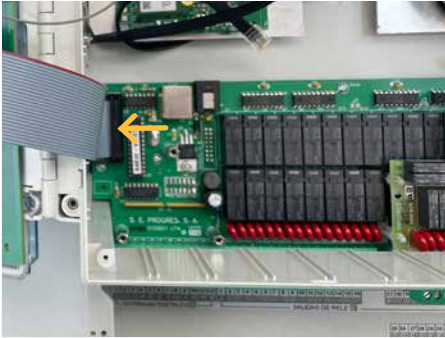

8 If the unit has the analog I/O board, install it again as it was removed in step 6. Care must be taken when connecting the 28-pin socket of the analog I/O board to the relay board as a pin may break.

9 If the unit has the GPRS modem option, place and screw the connector of the new antenna in the same place. Otherwise, drill a hole in the dimensions indicated below.

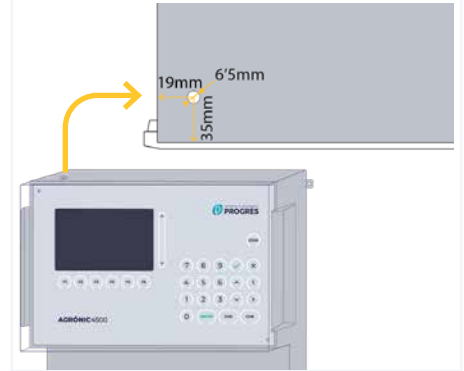

10 Close the unit and replace the four screws removed in step 2.



11 Important
Before powering the unit, connect the antenna cable. Also necessary for units that do not use the modem.

12 The antenna must be installed at a high point in order to have the best possible coverage or close to a window. Do not leave the antenna cable folded, stretch it out completely.

MATERIAL TO RETURN

- Agrónic 4000 front box model:
- Agrónic 4000 micro panel
 - Agrónic 4000 keyboard
 - GPRS modem (if the option is installed)

Replacing the front of the Agrònic 4000 to Agrònic 4500 for recessed model

SUPPLIED MATERIAL



Agrònic 4500 front panel for recessed model:

- Agrònic 4500 micro plate
- Agrònic 4500 keyboard
- Integrated GPRS/4G or WiFi modem -
- Integrated eSIM card -
- Antenna

RECESSED FORMAT ASSEMBLY

1 Disconnect power from the Agrònic 4000.

4 Check whether the unit has any telephone type cables connected to the keyboard. If it does, disconnect them from the plate because they are unusable.



2 Remove the six side screws and two central screws.



5 If the Agrònic 4000 unit has a GPRS modem option, remove the modem, the antenna and also the power cable that is connected to the relay or analog I/O board. (The Agrònic 4500 is supplied fitted with its modem and integrated eSIM card).



3 Separate the keyboard from the box.



6 If the Agrònic 4500 unit has an analog I/O option, remove the option by removing the three screws, so that the front can be changed.



7 Separate the keyboard part of the box by carefully pulling the flat gray tape that joins the two plates, and replace it with the new Agrónic 4500 front.



8 If the unit has the analog I/O board, install it again as it was removed in step 6. Care must be taken when connecting the 28-pin socket of the analog I/O board to the relay board as a pin may break.

9 If the unit has the GPRS modem option, place and screw the connector of the new antenna in the same place. Otherwise, drill a hole in the dimensions indicated below.



10 Close the unit and replace only the six side screws.



11 Important
Before powering the unit, connect the antenna cable. Also necessary for units that do not use the modem.

12 The antenna must be installed at a high point in order to have the best possible coverage or close to a window. Do not leave the antenna cable folded, stretch it out completely.

MATERIAL TO RETURN

- Agrónic 4000 front panel, recessed model:
- Agrónic 4000 micro plate
 - Agrónic 4000 keyboard
 - GPRS modem (if the option is installed).