

How to update the Agrónic 4500 software

To update the unit, you must have a computer with an internet connection and a **mini-USB to USB** cable (cable supplied with the controller).

If you do not have internet access on the farm, you must first download the requiered documents.

Before performing the upgrade, we recommend backing up the unit.

(Function - 4. Parameters - 14. Installer - 8. Backup)

The steps to get started with the upgrade are:

Download the software and the Agrónic 4500 version from the following links: (only step where internet access is required)

Software 64 bits (1)

Software 32 bits ⁽¹⁾

Versión Agrónic 4500

⁽¹⁾ A minimum operating systems of Windows 7 is required to use this software. It is important to specify whether you will be working with 32-bit or 64-bit architecture.

- <u>COMPUTER</u>: Click on the downloaded file named "SetupSTM32Cube.exe" or "SetupSTM64Cube.exe" and follow the installation steps.
- 3 <u>AGRÓNIC</u>: Open the Agrónic 4500 to gain access to the interior and connect the USB cable to the mini-usb connector on the micro board.
 - Box model: Remove the 4 screws from the keyboard and lift it up.
 - Embedded model: Remove the 6 rear side screws and separate the keyboard from the crate.



- 4 <u>AGRÓNIC</u>: Enter Function 4. Parameters 14. Installer (code 0429) 12. Update Software 1. USB and confirm the double question with the key.
- 5 <u>COMPUTER</u>: Modify "ST-LINK" port to "USB".
- **<u>6</u>** <u>COMPUTER</u>: Press the "**Refrescar**" option for the software to detect the Agrónic driver (controller).
- 7 <u>COMPUTER</u>: Press the"**Connect**" option to verify the USB is connected correctly.
- 8 <u>COMPUTER</u>: Select the "**Erasing and programming**" option indicated in the screenshot.
- <u>COMPUTER</u>: In the "Download" section, click on the "Browse" option and select the downloaded file in step 1 (c155_A4500v1.xx.hex).

10 <u>COMPUTER</u>: From the 3 possible options, select "**Run after programming**" only.

	9		5 7
¢.	70 STM32CubeProgrammer		- 0 ×
s	TM32 To CubeProgrammer	<u>(9)</u>	fi 🔼 🎽 🔀 🖅
	Erasing & Programming		Not connected
	Download	Erase flash memory Erase external memory	USB 🔻 Connect
	File path		USB configuration
\rightarrow		Erase selected sectors Full chip erase	Port No DFU 👻 🖉
		Se Index Start Address Size	Serial number
· · · · ·	Skip hash erase before programming		0xdf11
	Run after programming		0x0483
	Start Programming		TZEN Regression (MCU)
		No sectors to display	
	Full chip erase		
	✓ Download file		
	Log Li	ve Update Verbosity level 💿 1 🔵 2 🔵 3	
	12/02/30 (STMS2CubeProgrammer API V2.11.0) Windows-oHalts	4	
			Target information
			Board _
	$\widehat{\boldsymbol{e}}$		Type Device ID
			Revision ID Flash size
		0% 🕅	CPU _ Bootloader Version _

COMPUTER: Select the "Start programming" option to start the update (approx. 2 minutes)

STM32CubeProgrammer	- 0 X
STM32 CubeProgrammer	🧐 🖪 🕨 💌 🛧 🐬
Erasing & Programming	📑 🔷 Connected
Download	Erase flash memory Erase external memory USB Connect
File path File path	e Erase selected sectors Full chip erase Port No DFU Ø
Skip flash erase before programming	Se Index Start Address Size PD 0xdf11
Swy Run after programming	004483 Read Unprotect (MCU)
Automatic Mode	No sectors to display
☐ Full chip erase	

12 <u>COMPUTER</u>: At the end of the update, a message appears indicating the computer has lost the connection to the Agrónic. This message must be accepted in order to close the update program.

	Start adoress		Province of Province of			USB configuratio	n
	Skip flash erase before programming	1	Erase selected sectors	Full chip erase	Port	U581	• 0
	OB Run after programming		Se Index Start Addres	s Size	Serial number PID	Dedf11	
	CPU	Start Programming			VID	0x0483	
	swv Automatic Mode	Advertencia		×	Read Unprotect	мси)	
12—	Full chip erase	Warning: Connection to USB device is lost			TZEN Regression (MCU)		
	Option bytes commands -ob		Aceptar				

13 <u>AGRÓNIC</u>: The Agrónic automatically restarts showing the main screen. To check the version go to Query - 17. Agrónic.

14 <u>AGRÓNIC</u>: Finally, disconnect the mini-USB cable and replace the screws removed in the step 3.

Sistemes Electrònics Progrés, S.A.