


WiFi installatoin option

SUPPLIED MATERIAL

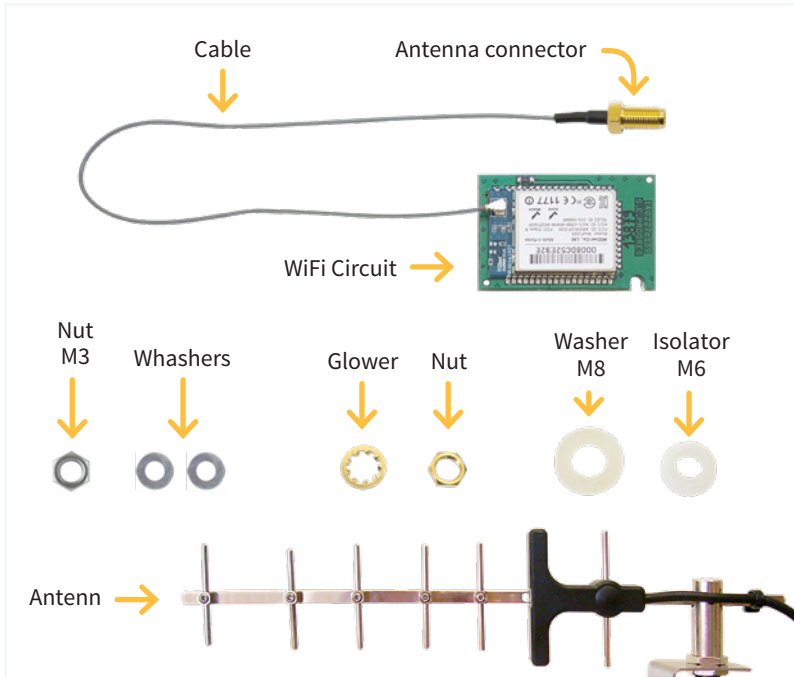

- WiFi modem circuit with cable and antenna connector
- For the circuit: 2 washers and 1 nut M3
- For the antenna connector: 1 glower, 1 nut, 1 isolator M6 (built-in) and 1 washer M8 (embed)
- 3 flanges (built-in) or 1 flange (box)
- 3 holders for flanges (built-in) or 1 (box)
- WiFi antenna

BUILT-IN FORMAT ASSEMBLY

- 1** Disconnect equipment power supply.


- 2** Remove the 6 screws.




- 3** Lift the keyboard.




- 4** Place the modem behind the keyboard. Insert a washer between the keyboard separator and the modem circuit.

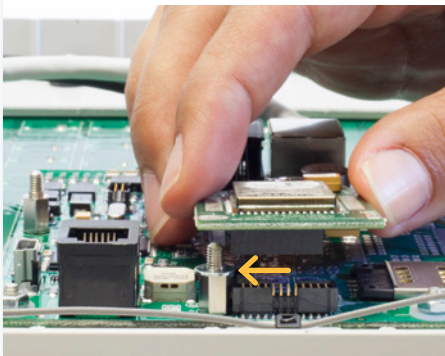

- 5** Place another washer between the modem and the nut.

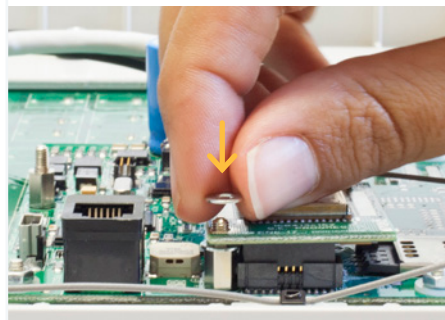

- 6** WiFi modem will be correctly installed only if its connector totally matches the keyboard connector, without any space between them.

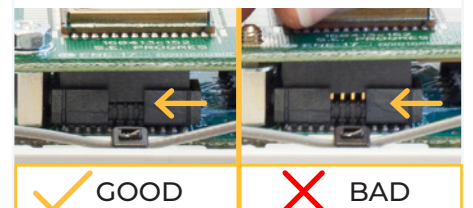

Be careful not to overtighten the nut, as the modem could be lift up from the other side.

7 Brake the die labelled as “WiFi” in the image by a small blow with a screwdriver or similar.




8 To install the antenna connector, place first the glower and the washer M8 on the inner side of the case.




9 And on the outer side, place the isolator M6 and then the nut.



10 Place the adhesive holders for the flanges as shown in the picture.

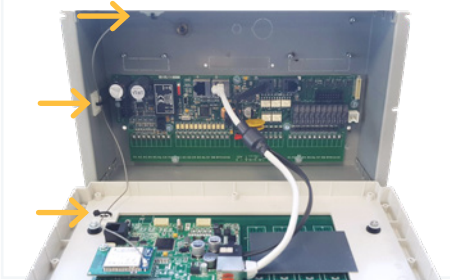

11 The antenna cable antenna must NOT be placed over the control board.

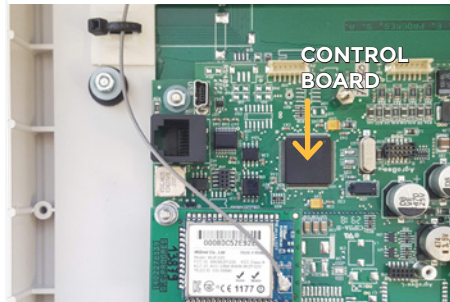

12 Put the keyboard back in its place and put the screws removed in step 2. Take special care to not trap the antenna cable between the plastic frame and the metal box of the equipment.

15 If all the steps have been taken, the installation of the Wifi modem is already finished

13 Connect the antenna y plug in the equipment. DO NOT power the equipment without first connecting the antenna, as the modem may be damaged.

14 Setup the WIFI network and password, looking at the Agrónic 5500 manual, section 6.12.4 Communication.


BOX FORMAT ASSEMBLY

For the assembly in box format, follow same steps as the built-in format, but changing steps 2, 7, 8 and 9 by:


2 Remove the 4 screws that hold the keyboard.




7 Make a hole in the right side as depicted in the image.

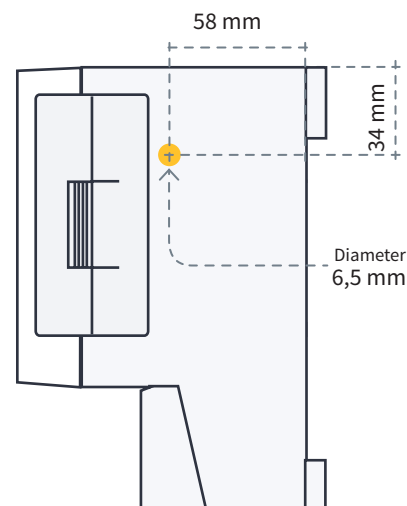

8 Place the antenna connector on the inner side of the hole. Place the glower before.

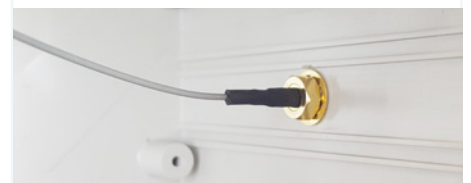

9 And screw the nut on the outer side.

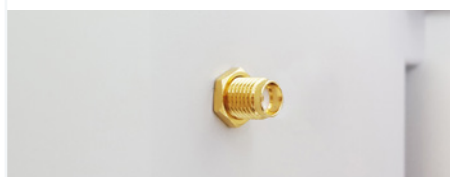

Sistemes Electrònics Progrés, S.A.