


GPRS modem installation

SUPPLIED MATERIAL

- GPRS Modem
- Power supply cable
- Data cable
- Antenna

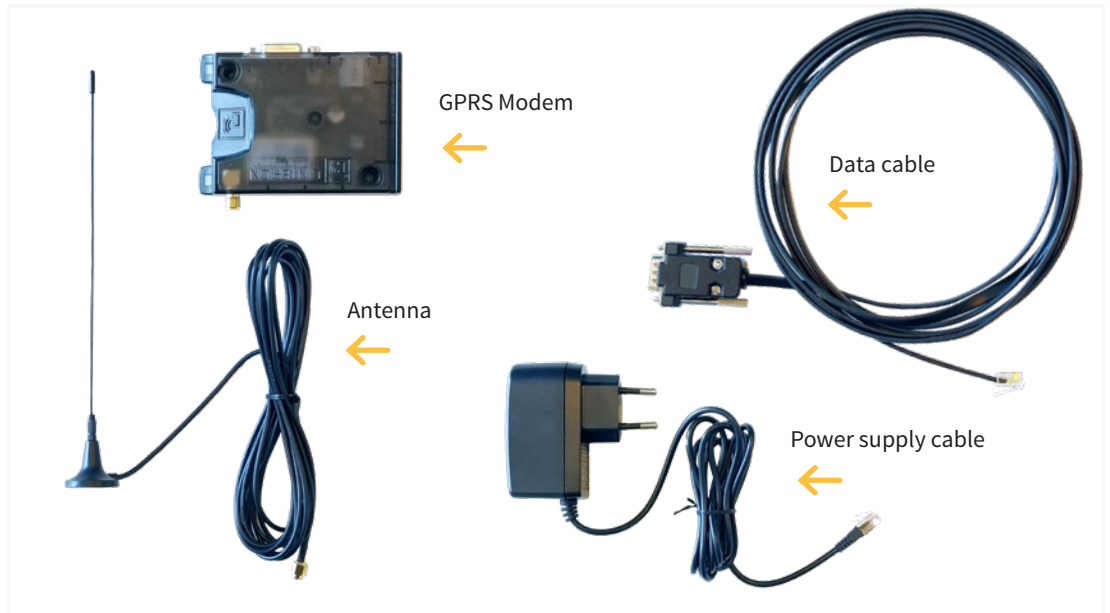


ASSEMBLY

- 1 Disconnect the power from the controller.

- 2 Insert the phone jack from the power supply to the modem.




- 3 Connect the three-metre telephone cable (telephone jack) to the RS232 port of the A7000 and (SUBD9) to the modem.

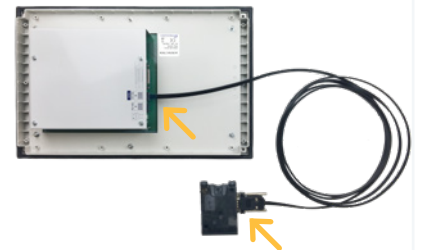

- 4 Connect the antenna to the modem and place it up high so that it has optimum visibility towards the GSM/ GPRS centre and granting it the proper coverage.



- 5 If you use the provided Progrés SIM card, see the attached instructions.

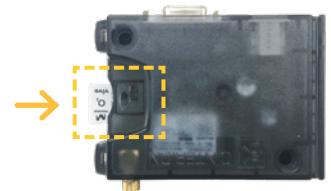

If you use your own, deactivate the PIN, remove the provided card (press until you hear a click), and insert your own card according to the drawing on the modem. Using a screwdriver, push the card into the slot until you hear a click.


6 Power up the controller and the modem.

The orange LED on the modem will begin to flash. When the modem has found coverage, the LED will remain off, periodically flashing.

IMPORTANT

Connect the antenna to the modem before powering up the controller.

7 Once you have followed all the steps, the installation of the GPRS modem is complete.

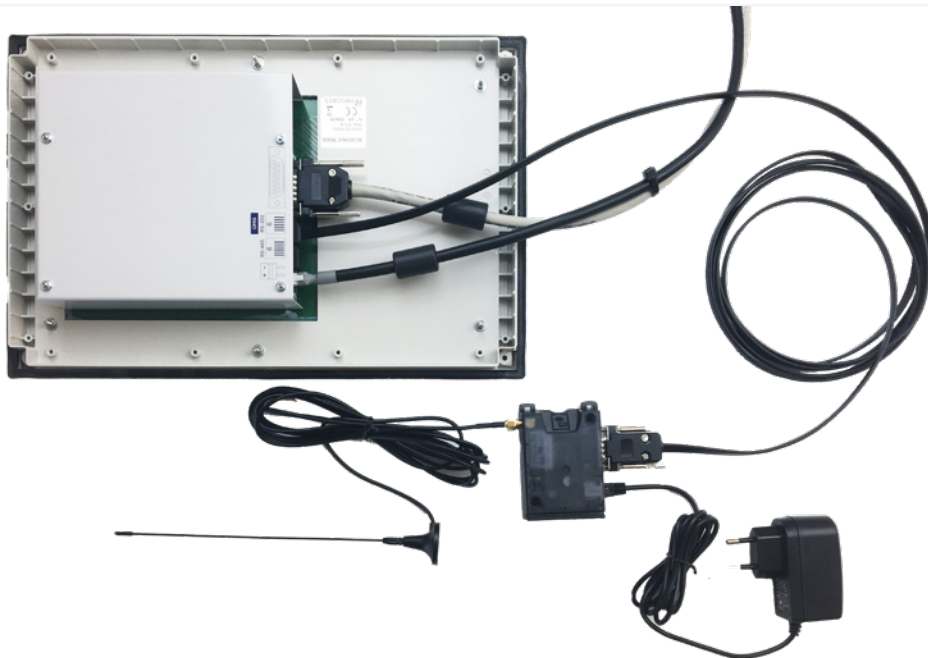

8 Follow the instructions in the controller manual to configure the communications.