


## SUPPLIED MATERIAL

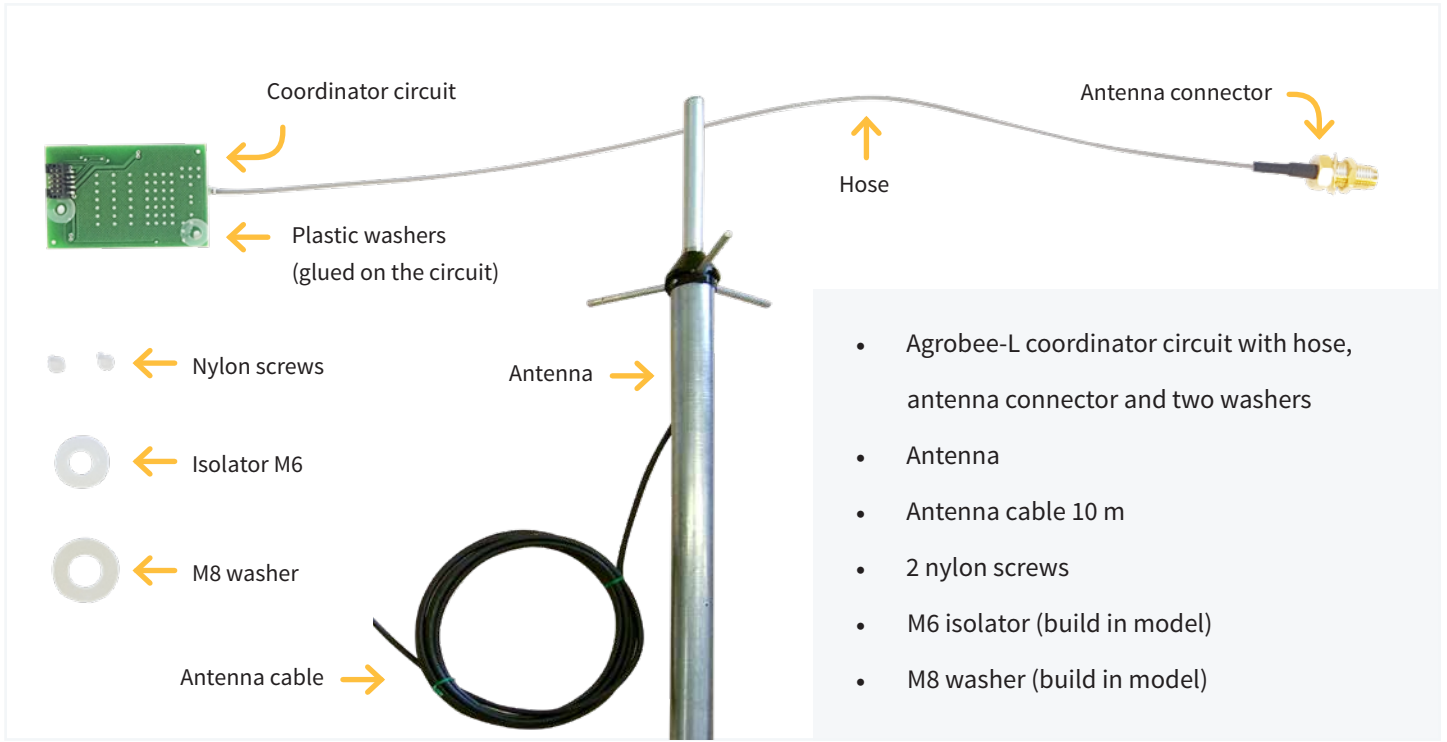

## MOUNTING BUID IN FORMAT

**1** Disconnect power to the controller.


**2** Remove the 6 screws that hold the keyboard.

**3** Lift the keyboard and disconnect the 2 wires that connect the keyboard circuit with the outputs circuit.

**4** Place the coordinator circuit at the designated point behind the keyboard.




**5** Screw the circuit with the two nylon screws.

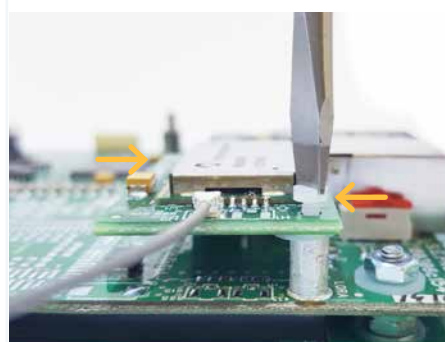

**6** Break the die-cut indicated in the image with a small blow with a screwdriver or similar.



- 7** To fit the antenna connector, place the M8 washer inside the box and the M6 isolator outside, then fit the nut.

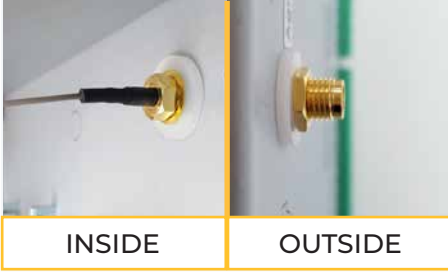

- 8** Reconnect the cables disconnected in point 3.



- 9** Close the equipment by fitting the screws, and connect the antenna cable and the antenna.



- 10** Place the antenna at a high point to achieve correct coverage.



- 11** Power the controller and realize the corresponding configuration using the manual provided “Agrobee-L User Manual - Configuration and consultation for Agrónic 2500 and Agrónic 5500”.

- 12** The installation of the Agrobee-L coordinator circuit has already been completed.


## IMPORTANT

Don't power the controller without first connecting the antenna, as the coordinator may be damaged.

## MOUNTING BOX FORMAT

To assemble the box format, follow the same steps as the buid in format, changing points 6 and 7 for:

- 6** Drill a hole on the right side as indicated in the image.

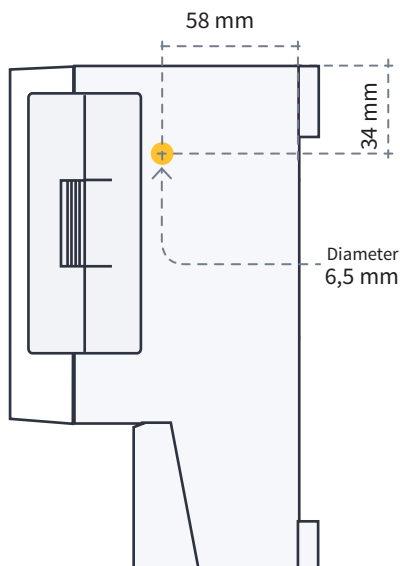

- 7** Place the antenna connector in the hole made, and fasten it with a glowler washer and nut.

