


6 analog input expansion installation

MATERIAL SUPPLIED

CODE 06550962

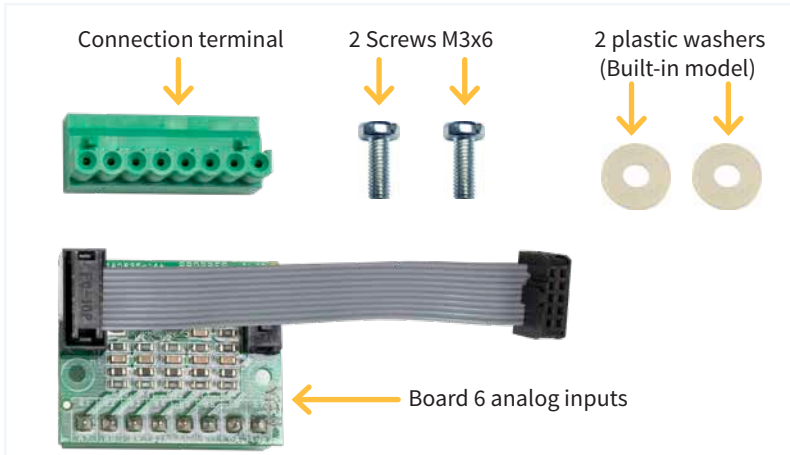

- Board with 6 analog inputs with tape + connection
- For the board: 2 M3x6 screws and 2 M3 plastic washers

BUILT-IN MOUNTING FORMAT

1 Disconnect power from the controller.

2 Remove the 6 side screws.

3 Separate the keyboard from the drawer.

4 If you have the adapted drawer, break the hole already punched.



5 Connect the analog input board to the real board as shown in the image.

6 Position the board in the hole made and fix it with the 2 screws and washers according to the image.



7 Connect the terminal to the board at the back of the controller.

8 Close the controller and put back the 6 lateral screws.

9 Reconnect the controller power.



1 Disconnect power from the controller.

2 Remove the 4 screws.



3 Lift the keyboard.



4 Connect the supplied ribbon on the relay board.



5 Position the board as shown in the image and place the 2 screws.



6 Connect the terminal to the installed board.



7 Close the controller and put back the 4 screws removed in step 2.

8 Reconnect the controller power.